


**WNST-1**




**WNST-2**

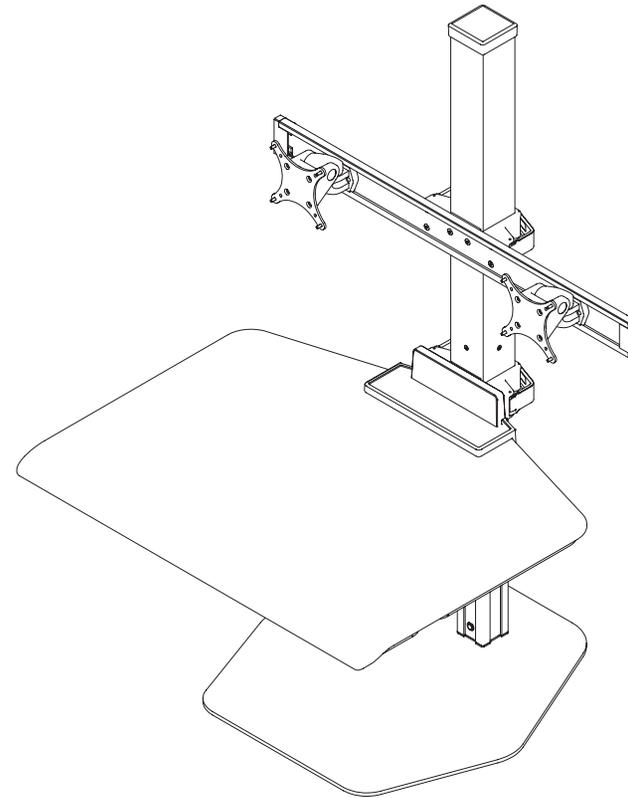

**CAUTION:**

Mechanism can rise quickly with no equipment in place. User equipment must be properly installed, prior to height adjustment. Failure to do so may result in personal injury and/or property damage.

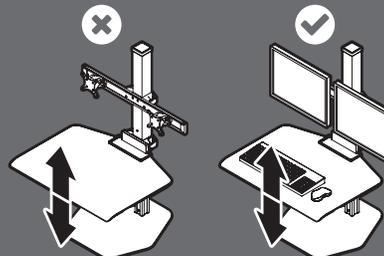

**NOTE:**











Depending on your Winston Workstation® configuration, **you may not receive all the parts shown** within this instruction booklet.

**Installation may require two people.**

Depending on your Winston Workstation® configuration, you may not receive all parts shown below.

# WNST-1 & WNST-2

## Winston Workstation® Single & Dual | Parts List

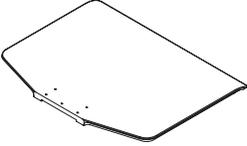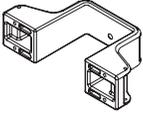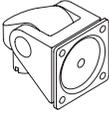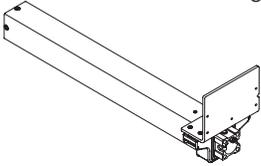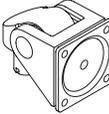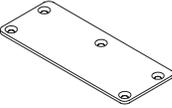
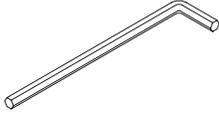
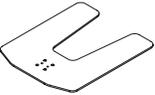
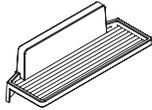
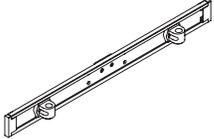
<p>A</p> <p>Work Surface 111435</p> 	<p>G</p> <p>3/8-16 x 1" FHSCS 701124</p> 	<p>M</p> <p>Column Clamp 111040</p> 	<p>S</p> <p>Standard Monitor Tilter 405397</p> 	<p>Y</p> <p>Column Cable Clip 111203-708</p> 
<p>B</p> <p>Column 411470</p> 	<p>H</p> <p>Screws 713273</p> 	<p>N</p> <p>1/8" Allen Wrench 701312</p> 	<p>T</p> <p>HD Monitor Tilter (optional) 407747</p> 	
<p>C</p> <p>Felt Pad 111464</p> 	<p>I</p> <p>Top Plate 111736</p> 	<p>O</p> <p>7/32" Allen Wrench 701127</p> 	<p>U</p> <p>M4 x 12mm PhPHS 702096</p> 	
<p>D</p> <p>Freestanding Base (WNST-1 only) 111731</p> 	<p>J</p> <p>Utility Tray 113025</p> 	<p>P</p> <p>Column Cap 111275-708</p> 	<p>V</p> <p>Fine Tune Adjust (optional) 8473</p> 	
<p>E</p> <p>Freestanding Base (WNST-2 only) 111248</p> 	<p>K</p> <p>10-32 x 1" FHSCS 711467</p> 	<p>Q</p> <p>10-32 x 3/8" PhFHS 702281</p> 	<p>W</p> <p>Dog Washer 111230-603</p> 	
<p>F</p> <p>Cable Retainer 111735</p> 	<p>L</p> <p>Beam (10" or 30") 412036 or 412037</p> 	<p>R</p> <p>75/100 mm VESA Adapter 105587</p> 	<p>X</p> <p>10-32 x 1/2" FHSCS 711240</p> 	

# STEP 1

# COLUMN






**IMPORTANT:** Do not pull excessively on cable – doing so may result in accidental actuation of column.

**CAUTION:** Do not press height adjust button until unit is fully assembled.

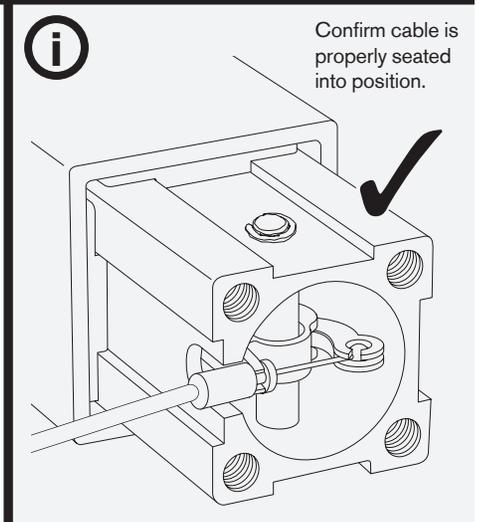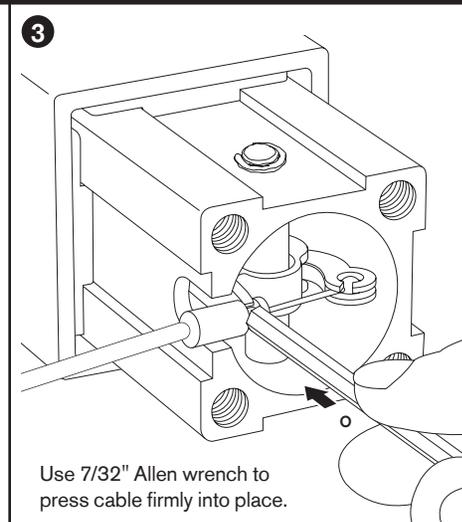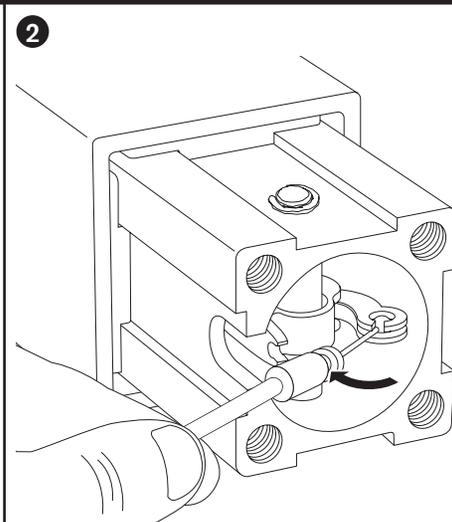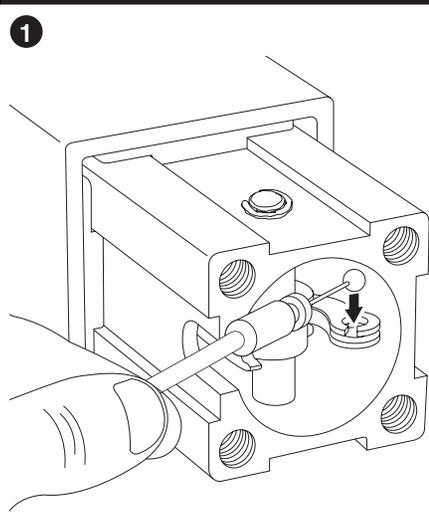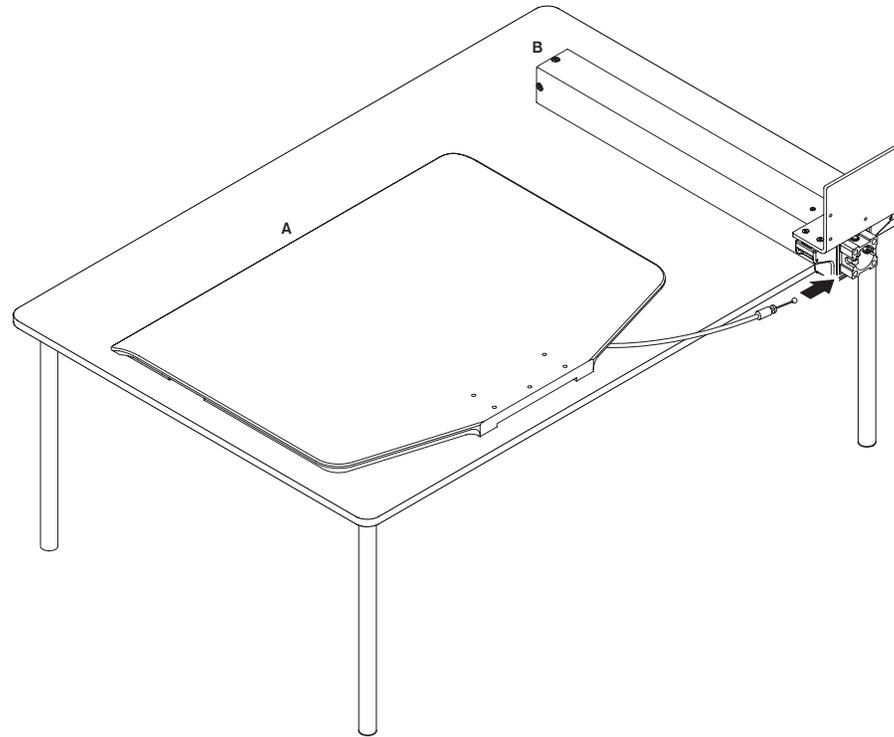

# STEP 2


# FREESTANDING MOUNT

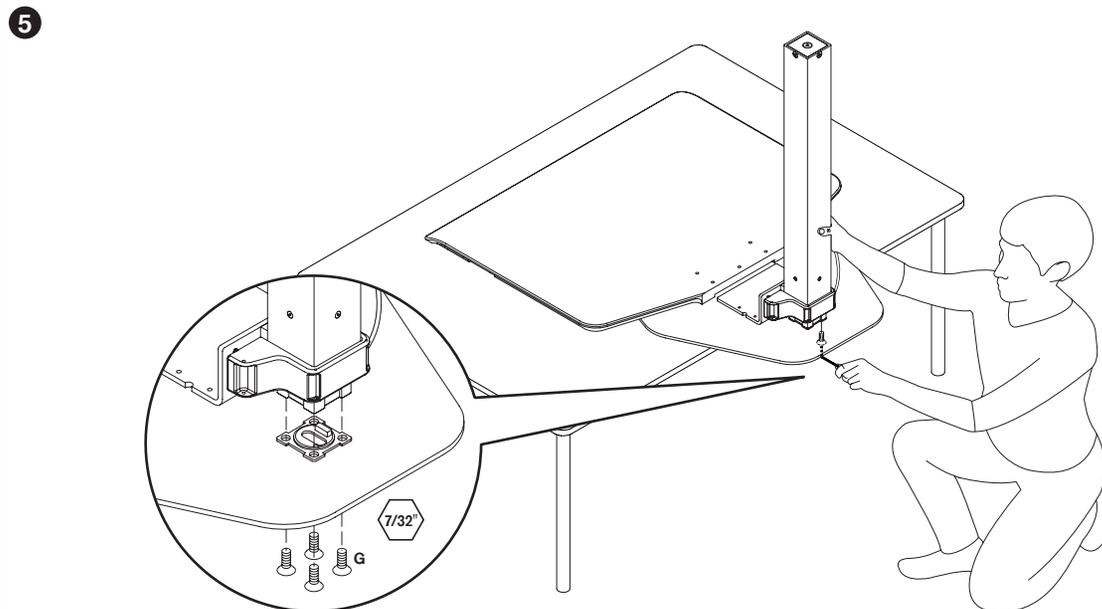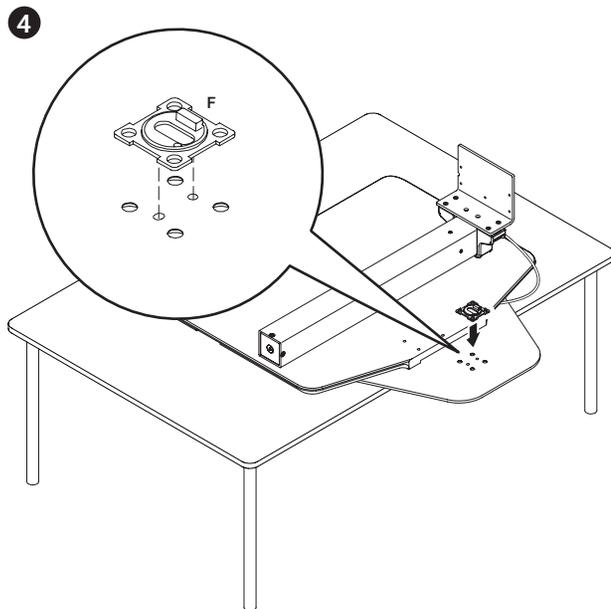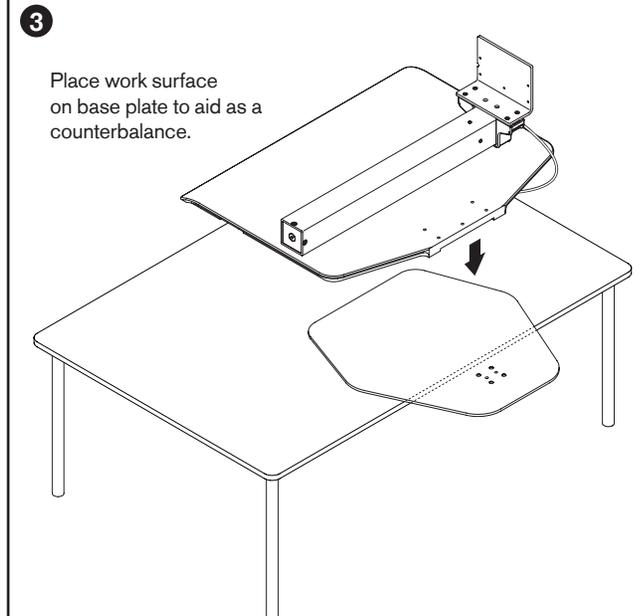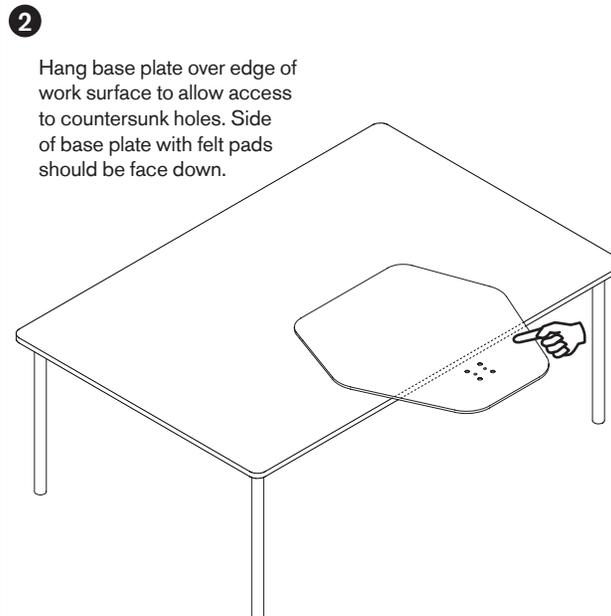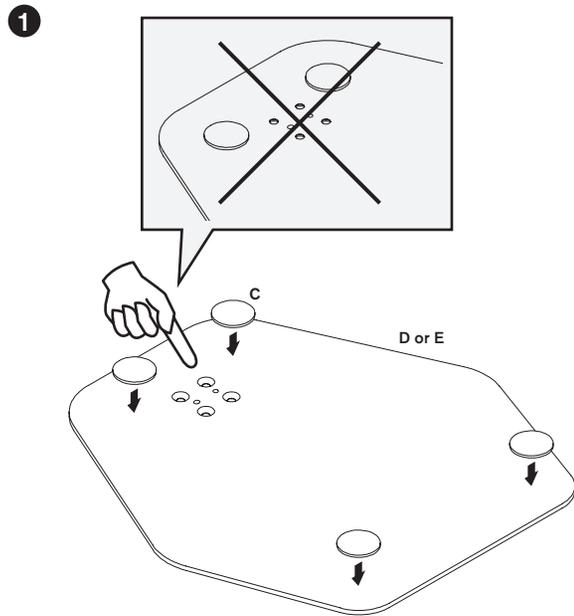

# STEP 3


# WORK SURFACE

1

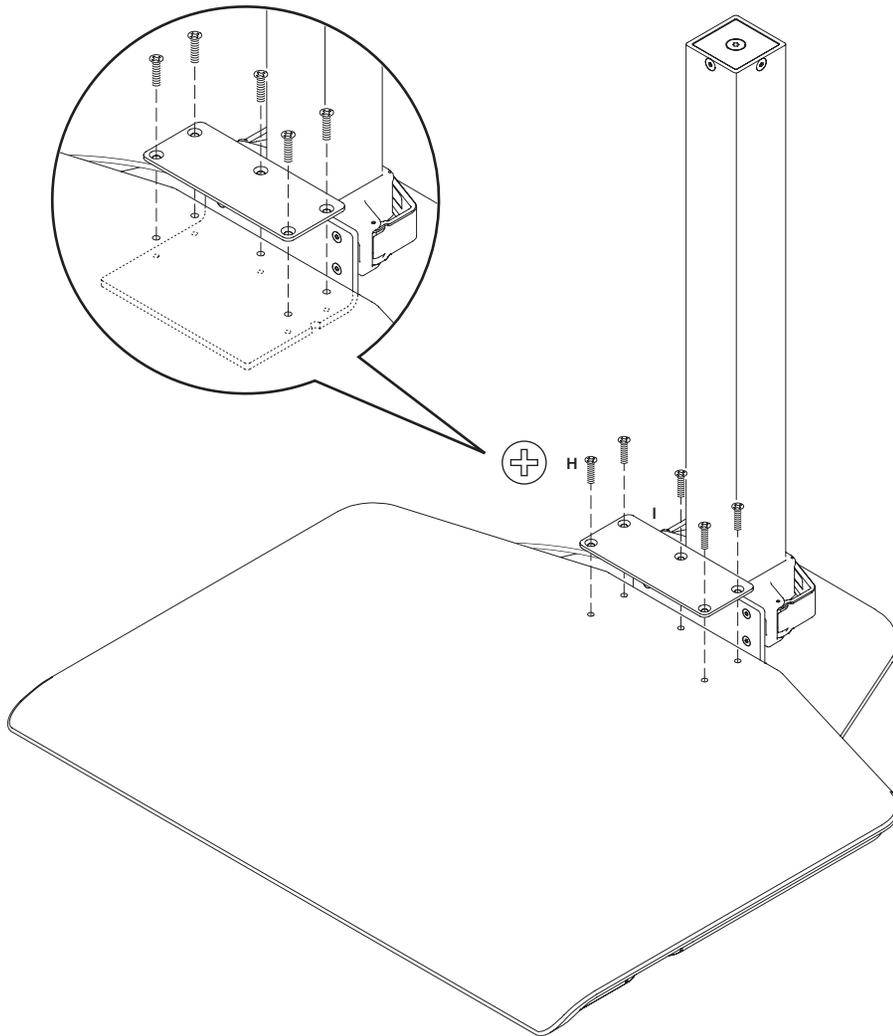

2


Slide utility tray onto work surface.  
Utility tray simply rests on top of  
work surface.

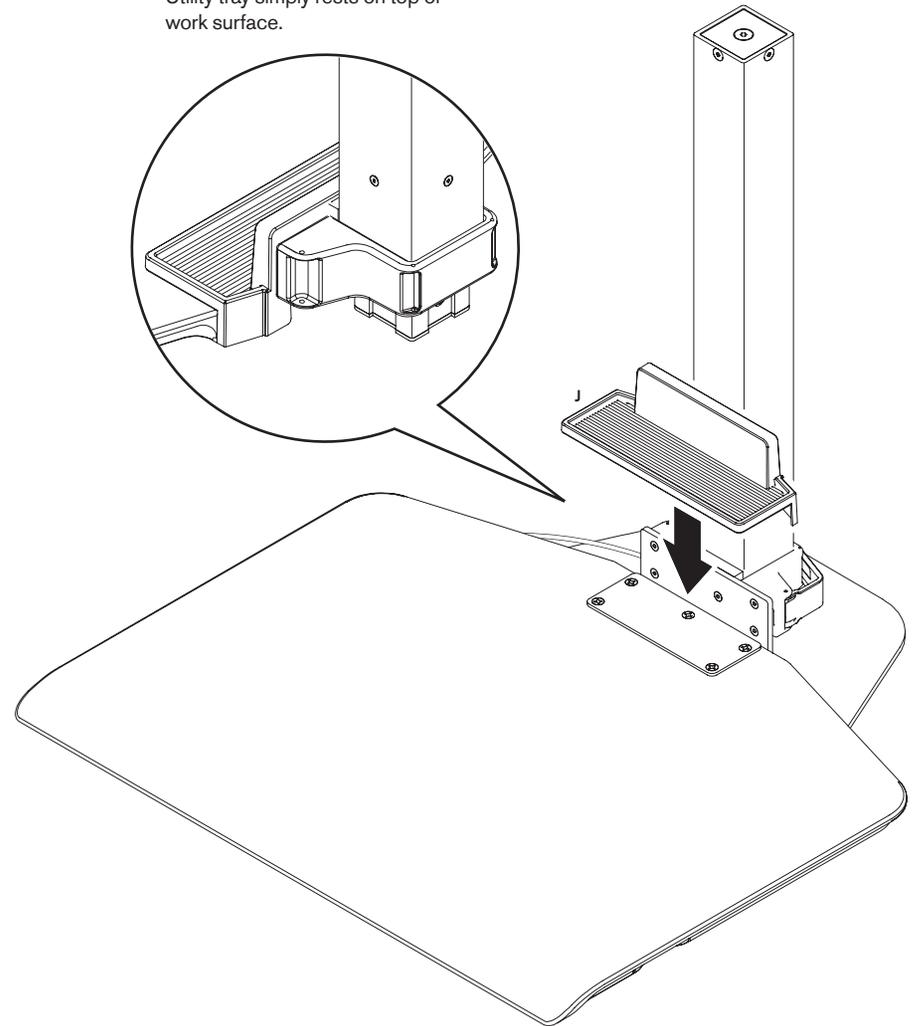


# STEP 4

# BEAM


1

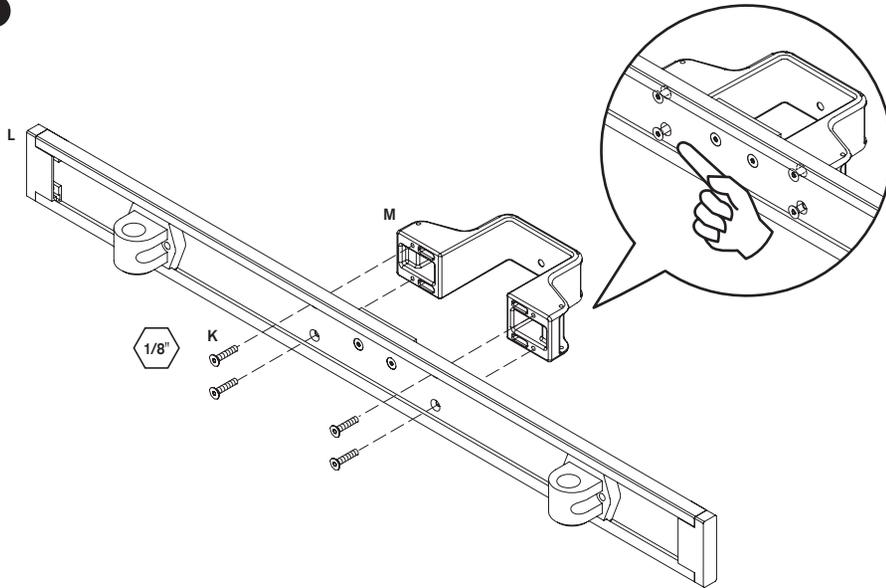

2

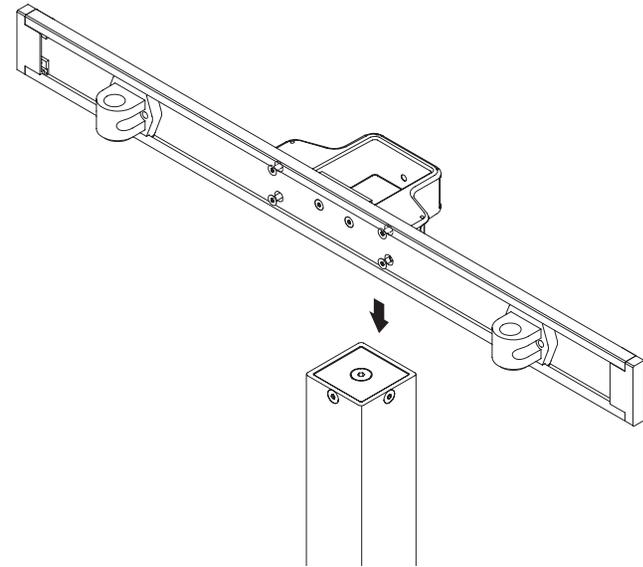


3

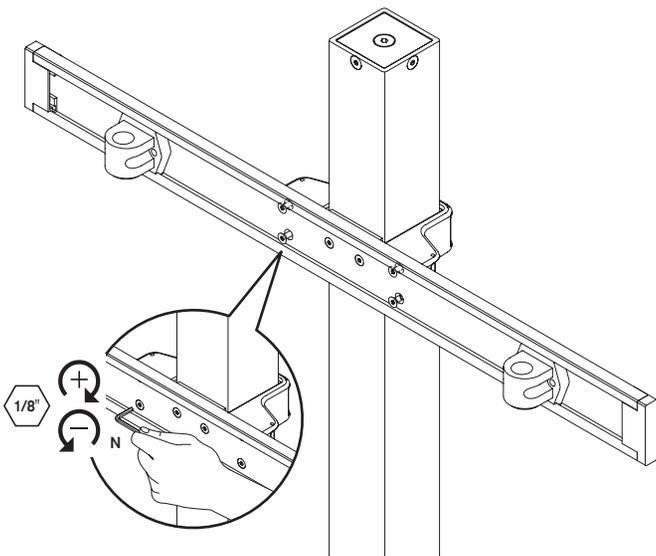


**IMPORTANT:**

Tighten bolts evenly.  
The beam should sit flush against the column, ensure there are no gaps. Also, it is important the work surface clamp is level.

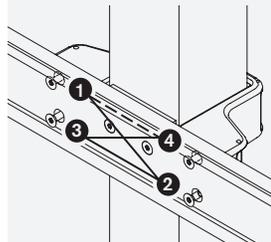

4

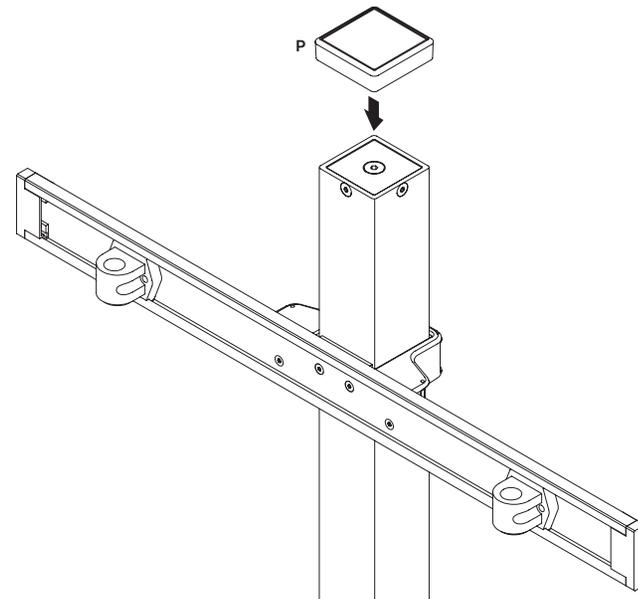


# STEP 5


# MONITOR TILTER

## STANDARD TILTER & SPRING TILTER

1

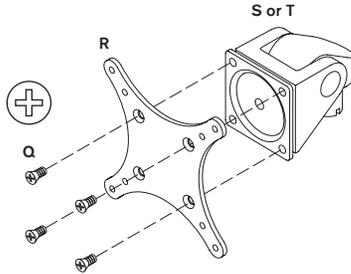


2

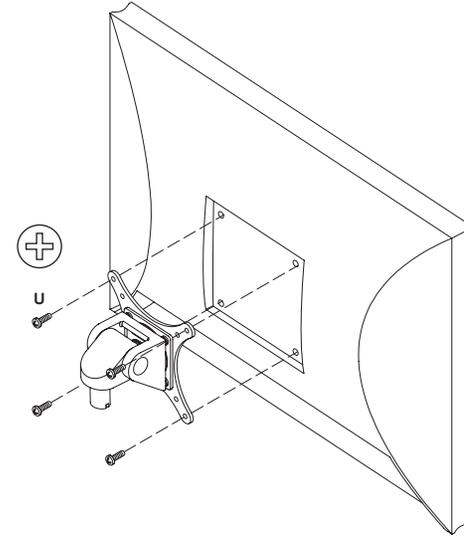


## FINE TUNE HEIGHT ADJUST TILTER


1

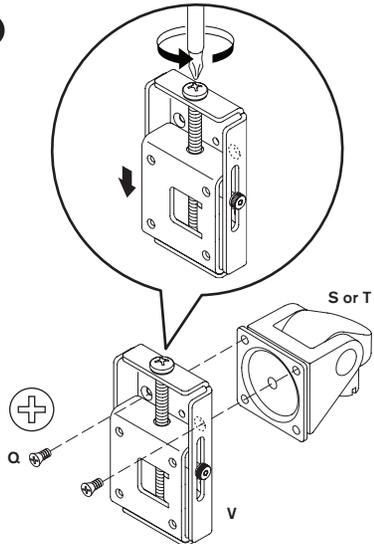


2

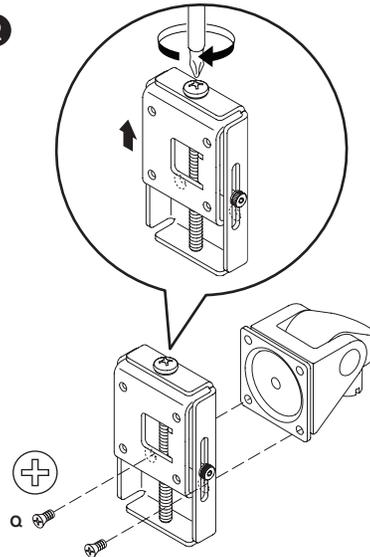

3

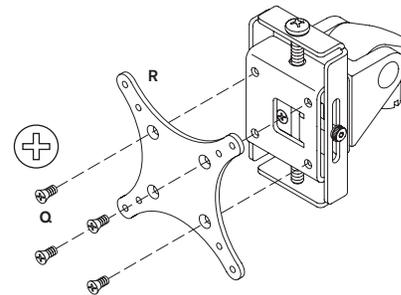



4

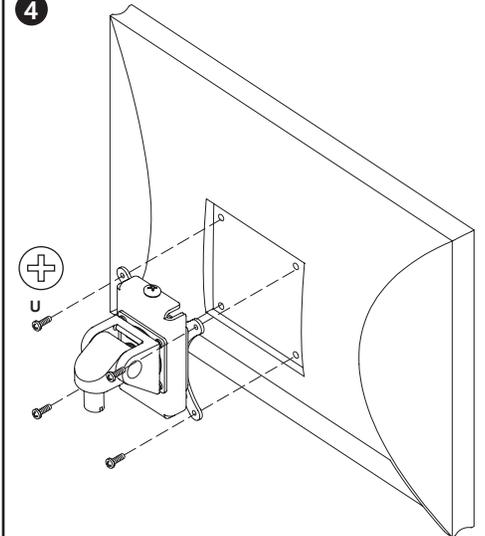

# STEP 6

# MONITOR CUPS


1

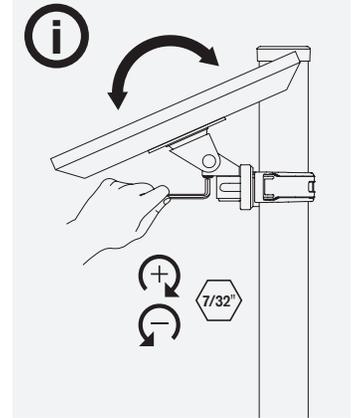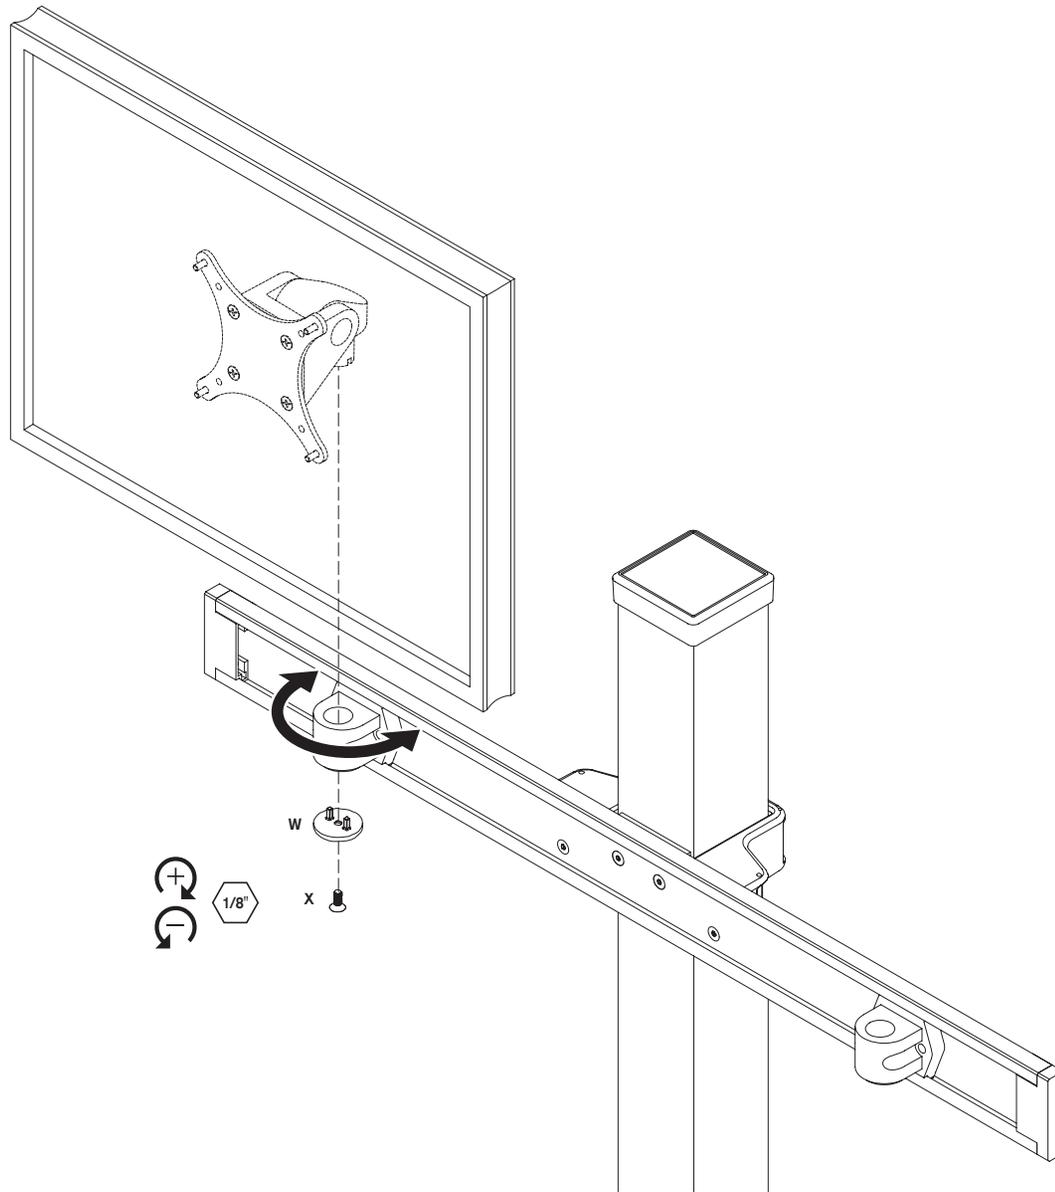


# STEP 7

# CABLE MANAGEMENT

1

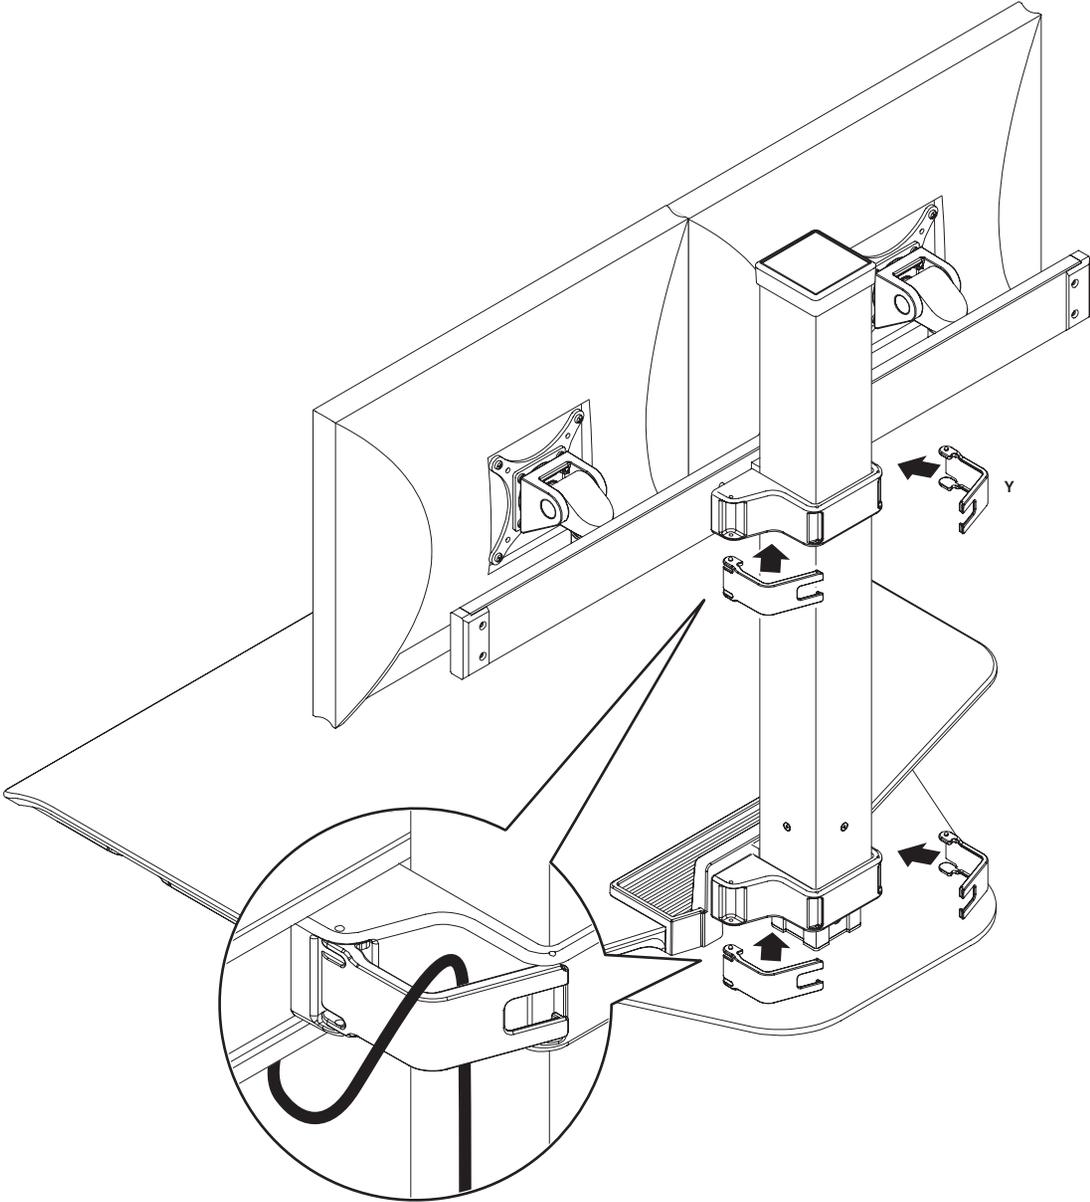

# HEIGHT ADJUSTMENT

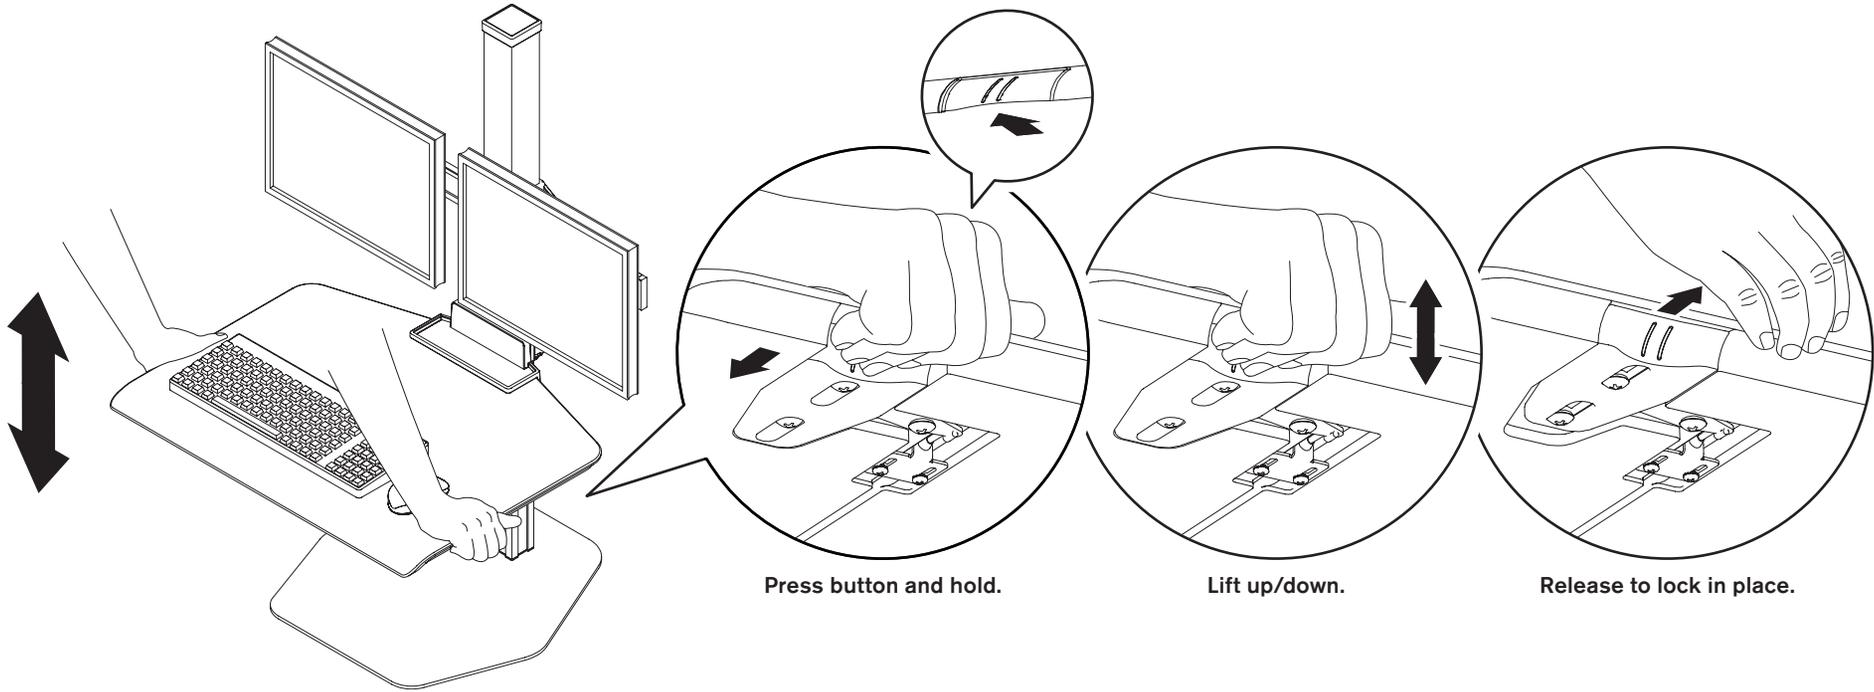

**i** **Is your height adjust button not working?**  
If so, make the adjustments below.

- 1 Slide workstation so that the work surface hangs over desk edge to allow access to underneath the work surface.
- 2 Loosen the two screws as shown.
- 3 Slide bracket in the direction shown and tighten screws.
- 4 Test height adjust button – readjust by repeating the steps above as necessary.

